


ATTACHING SUPER SPLIT SIDE CURTAIN TO HEADER FRAME:

1. SIDE CURTAINS TO BE INSTALLED FLUSH WITH THE WALL
2. SUPER SPLIT TO MATCH THE CORNER OF THE HEADER FRAME.
3. USE TEK SCREWS (QTY 3) TO ATTACH THE CURTAIN TO THE SIDE OF THE FRAME / GALVANIZED BRACKET.
4. USE ROOFING NAILS (QTY 2) TO ATTACH THE CURTAIN TO THE FRONT OF THE FRAME (WITHIN 8" FROM THE CORNER).
5. USE FLAT QUAD SCREWS & WASHERS THROUGH THE STAY TO THE FRAME 1" FROM THE BOTTOM EDGE.

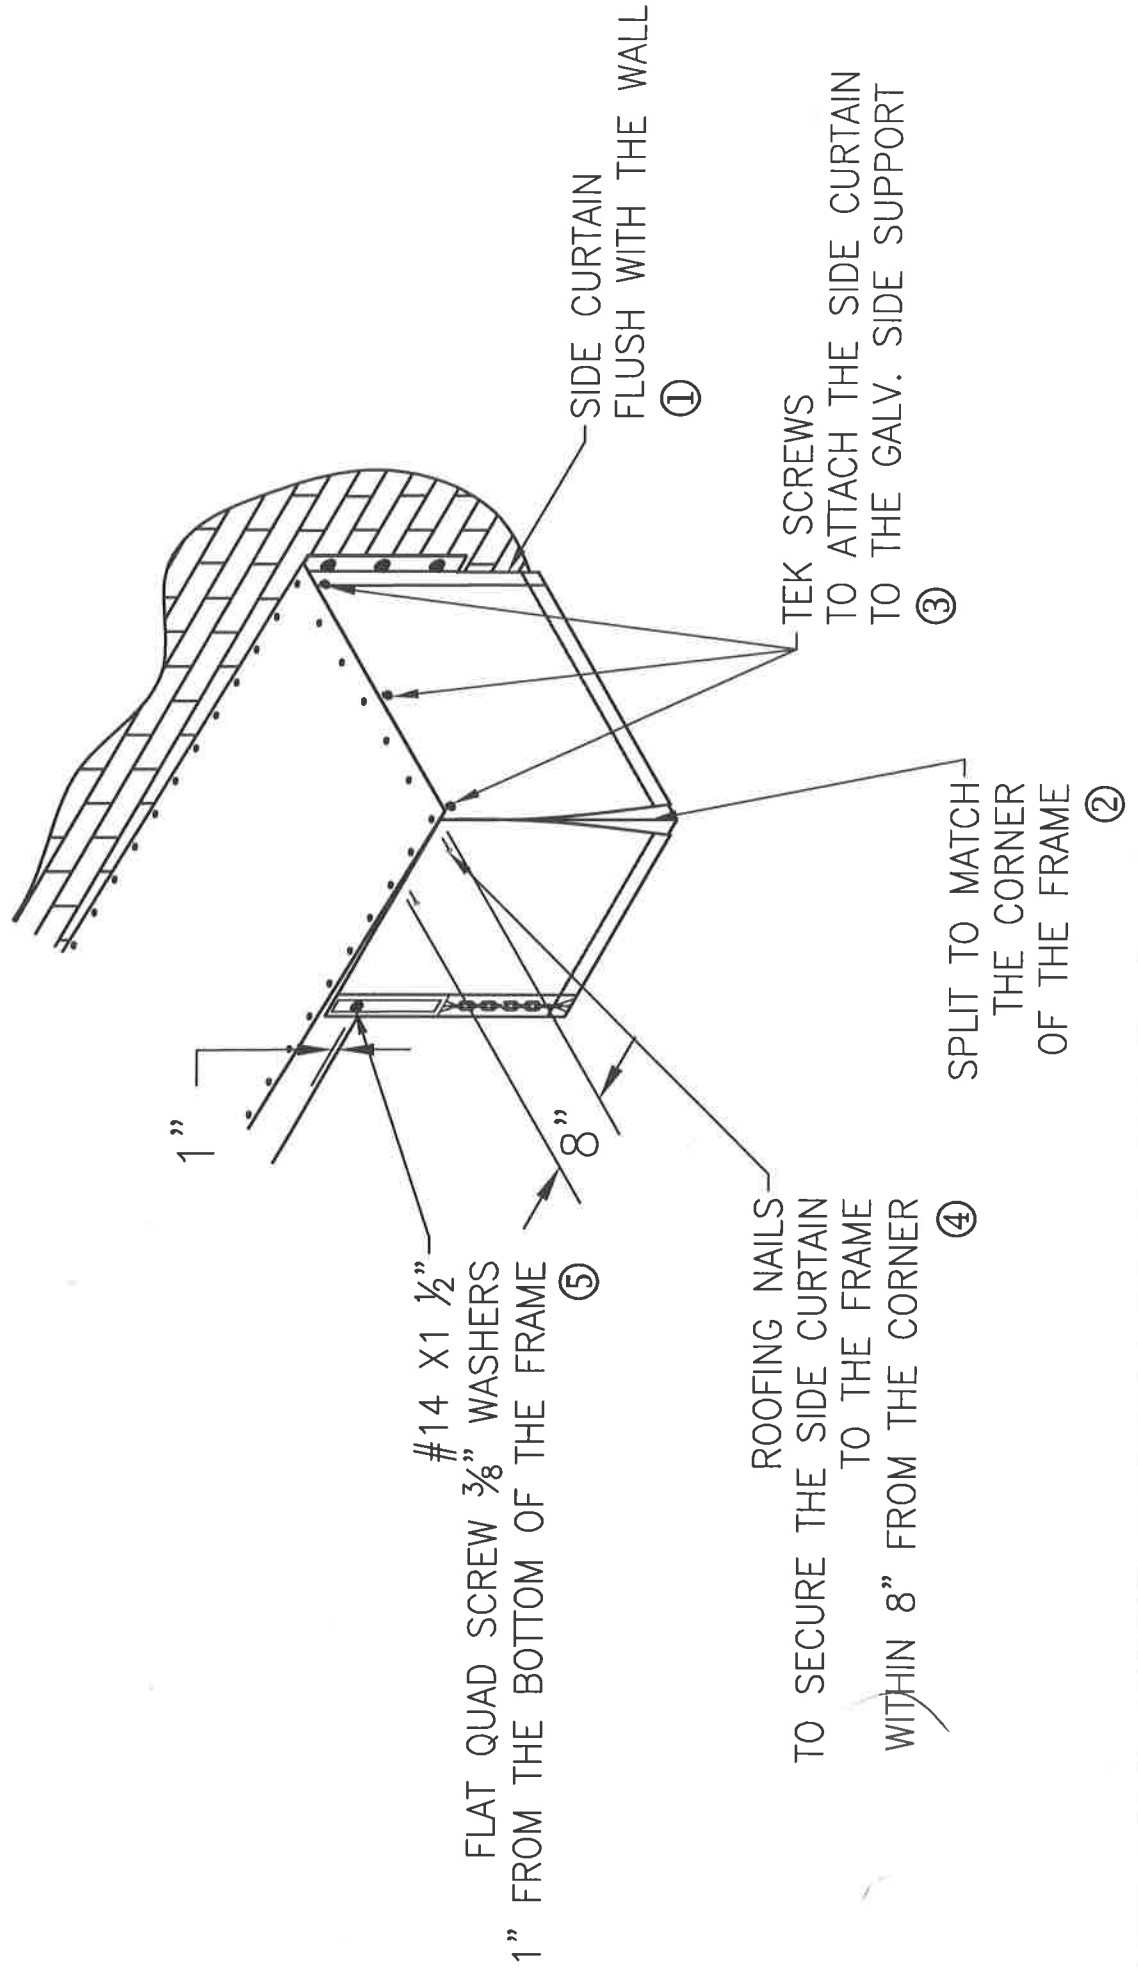

ATTACHING FRONT CURTAIN TO HEADER FRAME:

1. POSITION AND SECURE HEADER FRONT CURTAIN TO THE FRAME USING (QTY 10) SUPPLIED ROOFING NAILS.
- (AVOID NAILING INTO HEAD CURTAINS STAYS).
2. MATCH THE TOP CENTER OF CURTAIN WITH TOP CENTER OF HEADER FRAME.
3. SPREAD THE REST OF THE HEADER CURTAIN ALONG THE HEAD FRAME.
4. KEEP RAW EDGE OF THE CURTAIN FLUSH WITH TOP EDGE OF HEADER FRAME

RE-ATTACHING ANGLE TO FRONT TOP EDGE OF HEADER FRAME:

5. MATCH HOLES IN ANGLE WITH HEADER CURTAIN STAYS.
6. INSERT SCREWS AND $\frac{3}{8}$ " WASHERS INTO TRIM HOLES THROUGH STAYS.
7. SECURE.

